

Andr ea's mask cover pattern

2 ~ 7 1/2" x 10 1/2" used: X2 (inside different color)


5" wire

variety of straps

Ties: bias tape 14 1/2" - width of side - 16" (top) ~ 33 1/2 total (or 1 1/2" strip)

Ears: 6 1/2" elastic each side, 13" total


Head: 13" top, 8" bottom, 21" total

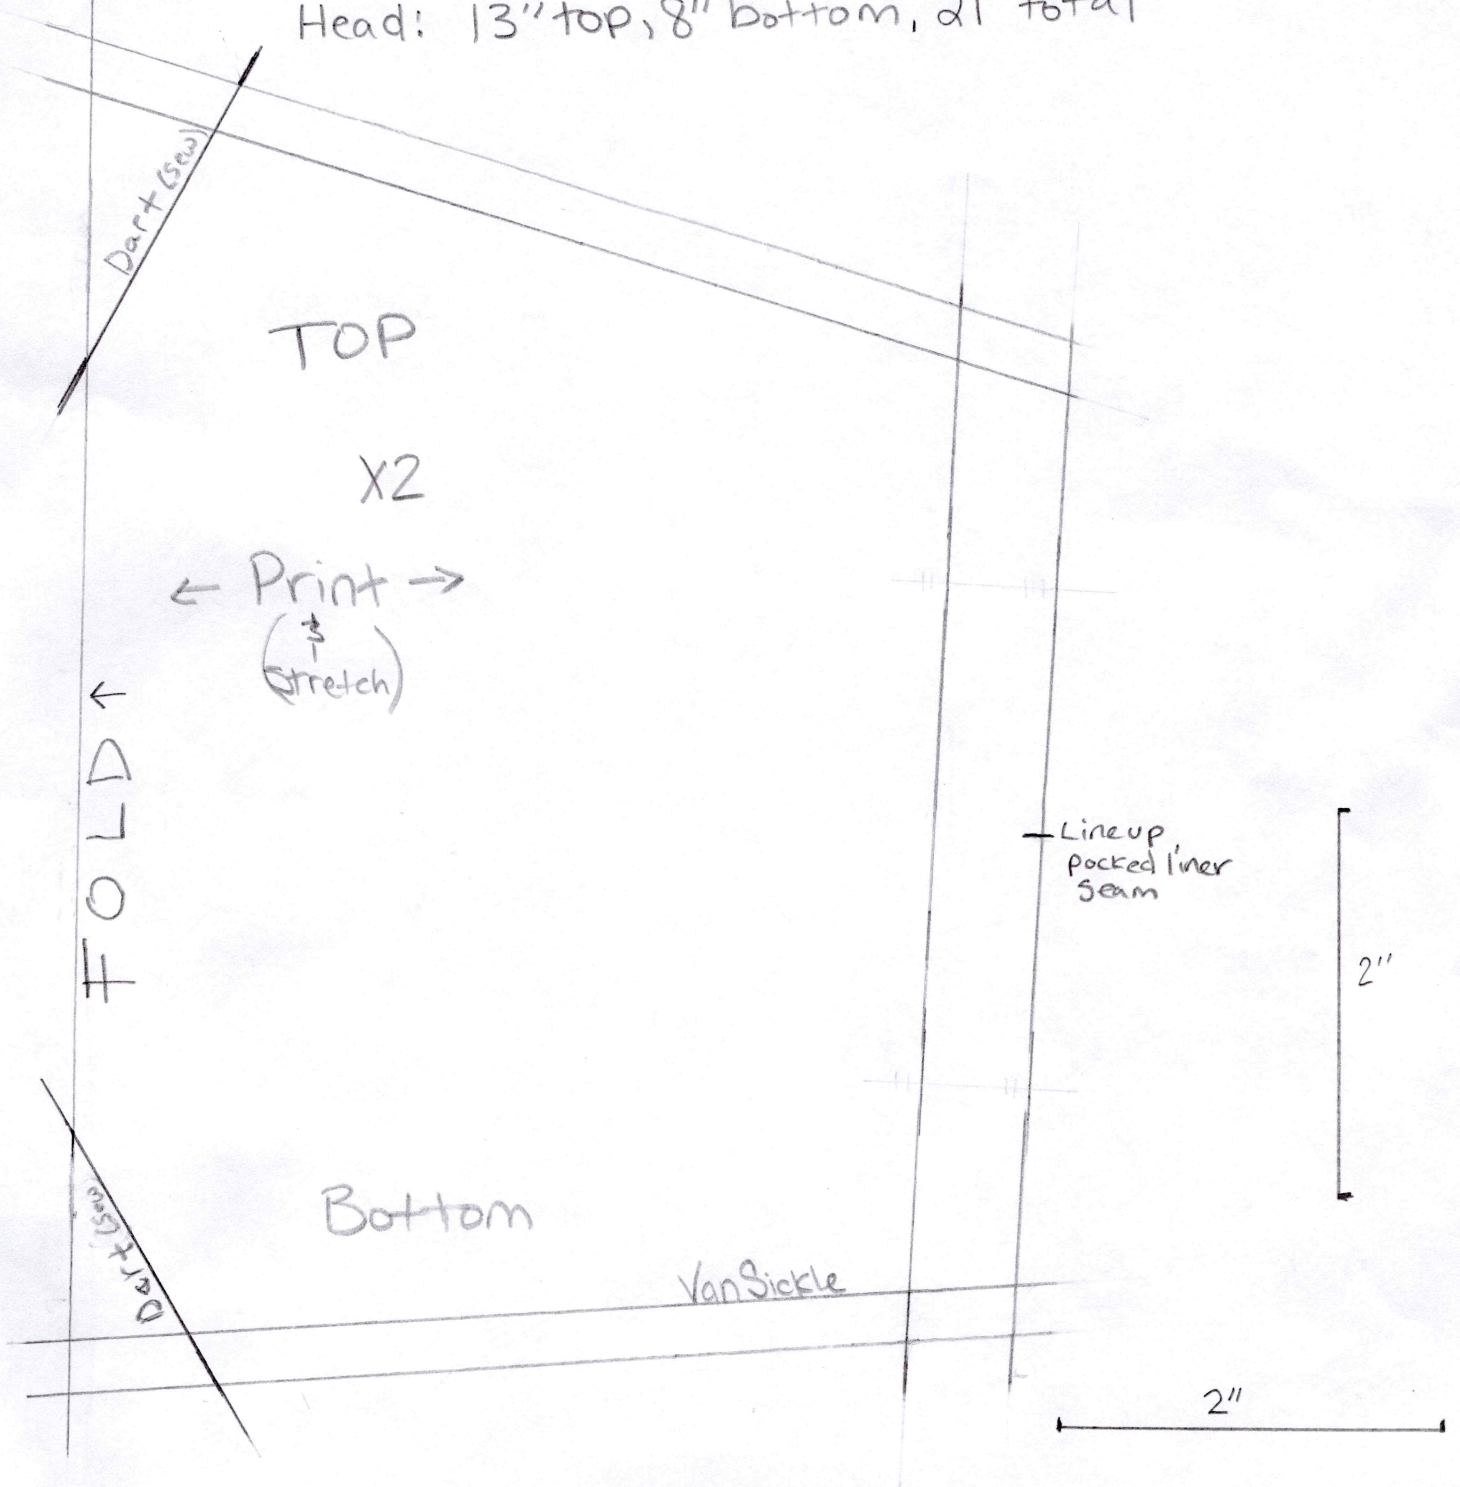

Alternate - w/pocket

Cut 2 inside fabric color: 5" x 10 1/2"

Set machine to very large stitch and sew 3/4" together long side, good sides together.

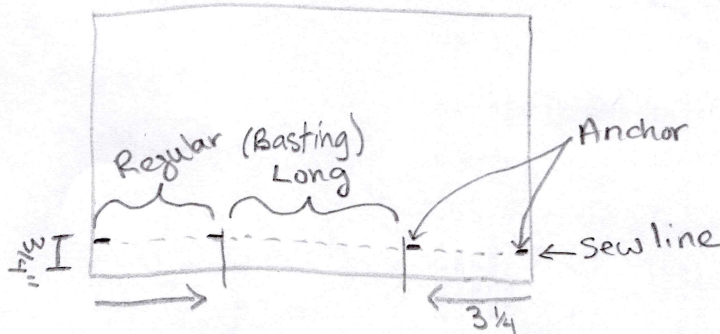

Mark 3/4" from ends

Sew with regular stitch over large stitch leaving middle alone.

press open seams & fold each sides for finished ends

Sew both seam sides down

Fold & follow regular instructions ☺



* For pocket, seam-rip basted middle after construction is complete. (or let them do later)

Steps

- Cut out pattern in 2 different colors so medical prof. don't accidentally put on backwards. Or sew inside as "wrong side" fabric
 - Good sides together, Sew dart on top & bottom of both. clip, press.
 - Put good sides together or inside & outside & pin.
 - Sew 1/4" from edge on top & bottom only. press seams open & flip. press
 - Cut wire 5" and roll ends, put between fabric & pin in place
 - Sew 1/4" top & bottom
 - measure 1 - 1 1/4" from each end & mark.
 - stitch a few stitches together & press open, pin pleat.
 - Sew pleats down & cut fabric straight
 - on backside Sew in fabric strip / bias tape,
- Or
add a channel for elastic, sew elastic in by folding sides in

